


## Conventional heating and cooling (up to 2 stages each)

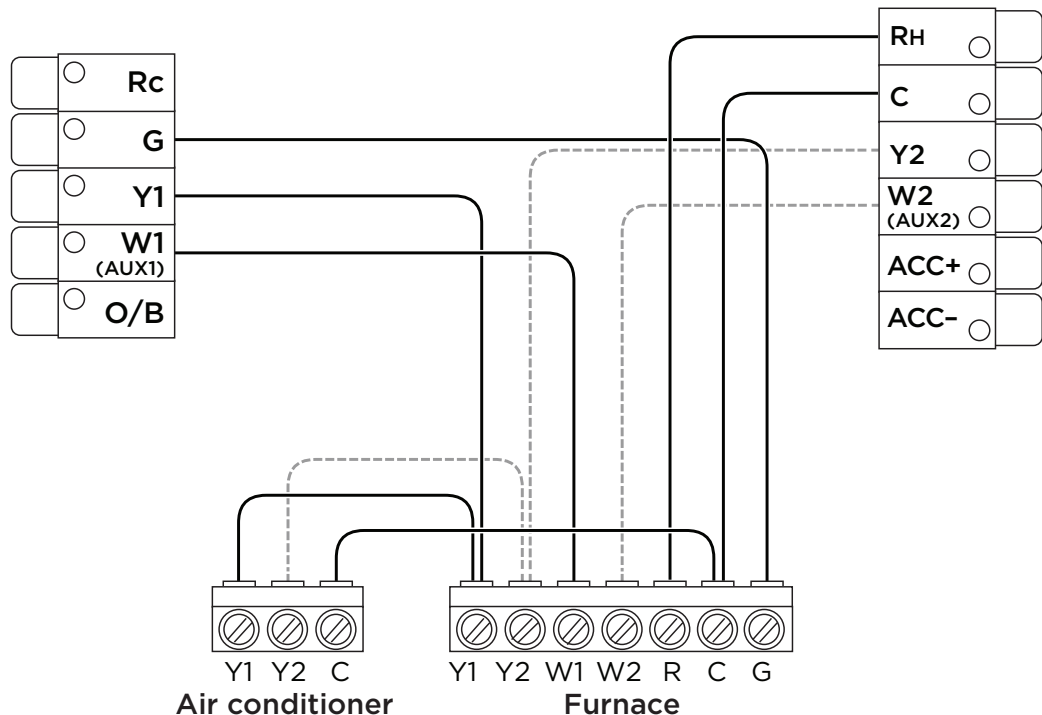

----- Stage 2 heat and cool  
if applicable

**Note:** Do not jumper Rc or Rh, ecobee3 does this automatically. R can go into either Rc or Rh terminals on your ecobee3.