


# Heat pump (air or geothermal) with auxiliary heat

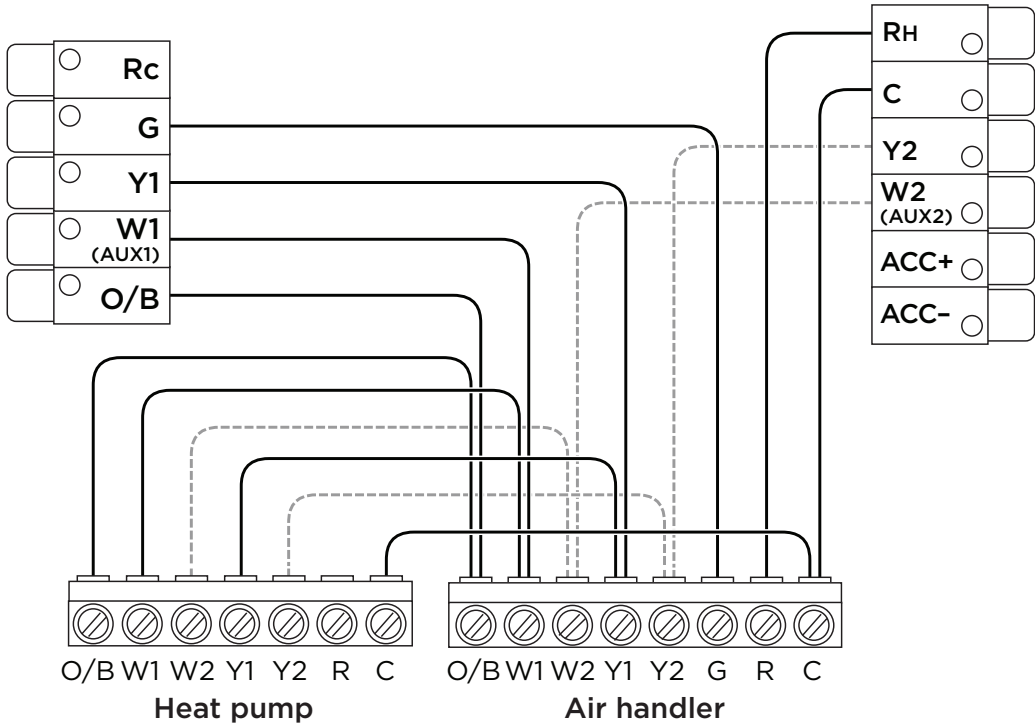

----- Stage 2 compressor and auxiliary heat if applicable

**Note:** Do not jumper Rc or Rh, ecobee3 does this automatically. R can go into either Rc or Rh terminals on your ecobee3.